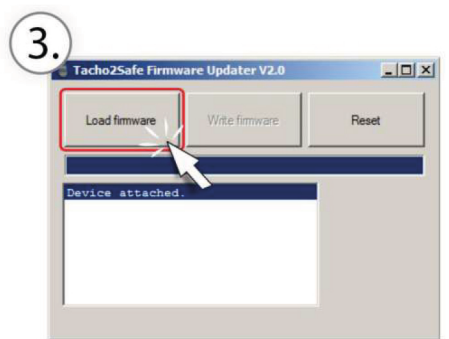
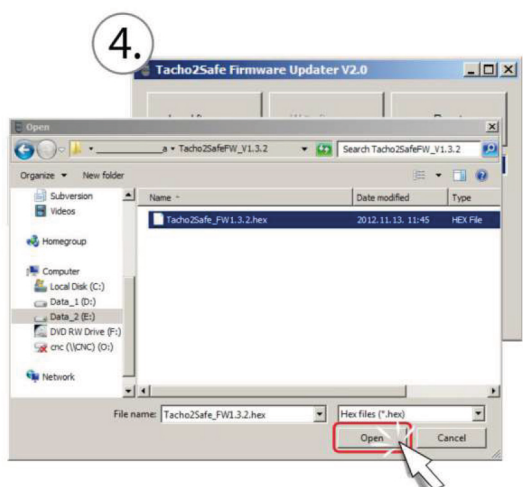


Tacho2Safe update


- 

1. Tacho2Safe device connected to a USB cable. The device has a screen and four function keys labeled F1, F2, F3, and F4. A red arrow points to the USB port.
- 

2. Tacho2Safe device connected to a laptop. The device screen displays "Welcome to Bootloader". A hand is shown pressing the F4 key. A red arrow points to the USB connection between the device and the laptop.
- 

3. Tacho2Safe Firmware Updater V2.0 software interface. The "Load firmware" button is highlighted with a red box and a mouse cursor. The status bar shows "Device attached."
- 

4. File selection dialog box showing the file "Tacho2Safe_FW1.3.2.hex" selected. The "Open" button is highlighted with a red box and a mouse cursor.
- 

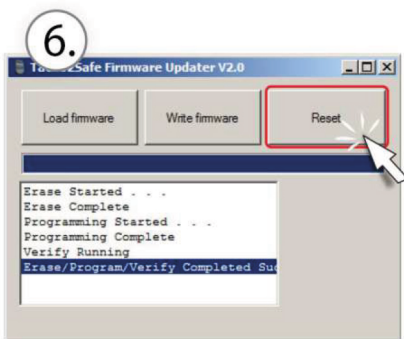5. Tacho2Safe Firmware Updater V2.0 software interface. The "Write firmware" button is highlighted with a red box and a mouse cursor. The status bar shows "Device attached."
- 

6. Tacho2Safe Firmware Updater V2.0 software interface. The "Reset" button is highlighted with a red box and a mouse cursor. The status bar shows "Erase Started . . .", "Erase Complete", "Programming Started . . .", "Programming Complete", "Verify Running", and "Erase/Program/Verify Completed Su".